

# Owner's Manual



First Edition: December 2002 Last Revision: August 2023 Document #720005-0000

# **NANOPTIX**



## **Legal Notices**

#### **Disclaimer**

Information in this document is subject to change without notice. Consult your Nanoptix Inc. sales representative for information that is applicable and current. Nanoptix Inc. reserves the right to improve products as new technology, components, software, and firmware become available.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Nanoptix Inc.

#### Copyright

Copyright 2003 by Nanoptix Inc. Dieppe, New Brunswick Canada All rights reserved Printed in Canada Confidential, Unpublished Property of Nanoptix Inc.

#### **Trademarks**

Epson is a registered trademark of Epson Corporation.

Windows is a registered trademark of Microsoft Corporation.

Nanoptix is a trademark. Other trademarks and registered trademarks are the property of their respective holders.

# Federal Communications Commission (FCC) Radio Frequency Interference Statement

#### Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### **Industry Canada (IC)**

#### **Radio Frequency Interference Statement**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.



#### Information to the User

This equipment must be installed and used in strict accordance with the manufacturer's instructions. However, there is no guarantee that interference to radio communications will not occur in a particular commercial installation. If this equipment does cause interference, which can be determined by turning the equipment off and on, the user is encouraged to contact Nanoptix Inc. immediately.

Nanoptix Inc. is not responsible for any radio or television interference caused by unauthorized modification of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Nanoptix Inc. The correction of interferences caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

In order to ensure compliance with the Product Safety, FCC and CE marking requirements, you must use the power supply, power cord, and interface cable which were shipped with this product or which meet the following parameters:

#### **Power Supply**

CSA/UL Listed power supply with standard 60Hz-50Hz, 100-240VAC input and 24VDC output equipped with AC line filtering, over-current and short-circuit protection.

Use of this product with a power supply other than the Nanoptix Inc. power supply will require you to test the power supply and Nanoptix Inc. printer for FCC and CE mark certification.

#### **Communication Interface Cable**

An approved Nanoptix interface cable must be used with this product. Use of a cable other than Nanoptix approved product will require that you test the cable with the Nanoptix Inc. printer and your system for FCC and CE mark certification.

#### **Power Cord**

CSA/UL listed, detachable power cord must be used. A power cord with Type SVT marking must be used. For applications outside North America, power cords that meet the particular country's certification and application requirements should be used.

Use of a power cord other than described here may result in a violation of safety certifications that is in force in the country of use.



# **Table of Contents**

1.	About the Printer	1
1.1	Description of Printer	1
1.2	P. General specifications	2
1.3	B Duty Cycle limit	3
1.4	Printer Controls	3
	Printer Reset (Service use only)	3
	Paper Feed ButtonFirmware Option Selector DIP switches	
	LED	
1.5	Mounting	7
1.6	Changing Paper	8
1.7	<sup>'</sup> Testing the Printer	9
1.8	Troubleshooting the Printer	10
	Troubleshooting with LED	
	Printing Problems Printer Does Not Work	
	Filliter Does Not Work	11
2.	Media and Supplies Guide	12
2.1	Media Specifications	12
2.2	Pordering Thermal Paper	12
23	Ordering Miscellaneous Supplies	15
	Power Supply and Power Cord	
	Ordering Communication Cables	15
	Communication Cables Pin-Out	17
ΔP	PPENDIX A: Mechanical Drawings	18



# **Figures**

FIGURE 1: NANOPTIX PAYCHECK 4 <sup>™</sup> PRINTER	1
FIGURE 2: DUTY CYCLE LIMIT	3
FIGURE 2: PRINTER RESET	
FIGURE 3: PAPER FEED BUTTON	
FIGURE 4: DIP SWITCH	
FIGURE 5: LED POSITIONS	
FIGURE 6: HORIZONTAL AND VERTICAL MOUNTING POSITIONS	7
FIGURE 7: LOADING PAPER	
FIGURE 8: SAMPLE TEST TICKET	9
FIGURE 9: THERMAL PAPER SPECIFICATIONS	
FIGURE 10: TICKET STACK AND BANDING EXAMPLE	
FIGURE 11: MECHANICAL DIMENSIONS - PAYCHECK 4™ PRINTER RIGHT SIDE VIEW	18
FIGURE 12: MECHANICAL DIMENSIONS - PAYCHECK 4™ PRINTER BOTTOM VIEW	
FIGURE 13: MECHANICAL DIMENSIONS - PAYCHECK 4™ PRINTER FRONT VIEW	
FIGURE 14: MECHANICAL DIMENSIONS - PAYCHECK 4™ PRINTER TOP VIEW	
FIGURE 15: MECHANICAL DIMENSIONS - PAYCHECK ATM PRINTED LEET SIDE VIEW	



# **Tables**

TABLE 1: SPECIFICATION	2
TABLE 2: TROUBLESHOOTING WITH LED	
TABLE 3: TROUBLESHOOTING PRINTING PROBLEMS	10
TABLE 4: PRINTER DOES NOT WORK	11
TABLE 5: ORDERING THERMAL PAPER	12
TABLE 6: PART NUMBERS	15
TABLE 7: COMMUNICATION CABLES PART NUMBERS	15



## 1. About the Printer

## 1.1 Description of Printer

The Nanoptix PayCheck 4<sup>™</sup> printer, also known as Triton, is extremely fast, quiet, and very reliable. With thermal printing technology, there is no ribbon cassette to change, and paper loading is extremely simple. The printer is small enough to fit almost anywhere and is easy to use with the ticket exiting from the front.



Figure 1: Nanoptix PayCheck 4™ Printer



## 1.2 General specifications

Print Method	Direct Thermal	
Resolution	8 dot/mm (203 dpi)	
Print Width	64mm	
	65mm	
Paper Width		
Cartridge Size	200, 400, 600, 800 0°C to 50°C	
Operating Temperature		
Storage Temperature	-40°C to +75°C	
Operating Relative Humidity	5% to 90% RH at 50°C (non-condensing)	
Communication Interface Options	Bidirectional RS-232C	
	-Dedicated USB Communication -Dedicated USB Maintenance Port	
Momory/Eirmwaro	8MBytes RAM, 2MBytes Flash and 8kBytes of	
Memory/Firmware	FRAM	
Resident Character Sets	Arial Bold (6 sizes)	
	Note: Other Character sets can be	
	programmed quickly	
Integrated Bar Codes	UPC-A, UPC-E,Interleaved 2 of 5, Code 39,	
	Code 128, EAN 8, EAN 13.	
	Note: Other Bar Codes can be programmed quickly	
Speed	Up to 200 mm/second (monochrome)	
Speed	Up to 125 mm/second (two-color mode)	
Sensors	Paper in	
Someons	Tray open	
	Top of form	
	Paper low	
Real Time Clock	Battery backed-up (Silver oxide coin cell	
	battery)	
Human Interface	Drop-in paper loading, status LED, paper feed	
	button	
Duty Cycle (max.)	5 tickets per minute	
Dimensions	113mm width x 67mm height x 286mm depth	
Weight	1.5kg	
Immunity	EN 55024	
Emission Standards	Information Technology Equipment United States - FCC Part 15 Subpart A	
Emission Standards	Canada - Industry Canada ICES-003	
	Europe – EN 55022	
	Class B emissions	
	Information Technology Equipment	
Durability (Thermal head)	100 Km of paper transport or 100 Million pulses	
	per element with approved paper	
Maintenance	Approved IPA alcohol felt-tip cleaner or	
	cleaning cards for cleaning thermal head	
Safety	Certified (QPS listed)	
	Control Number: LRE1123	

**Table 1: Specification** 





## 1.3 Duty Cycle limit

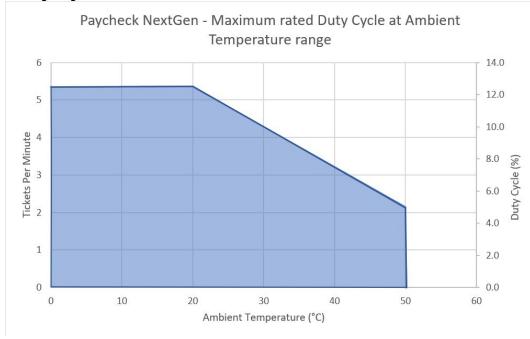


Figure 2: Duty Cycle Limit

### **1.4 Printer Controls**

### **Printer Reset (Service use only)**

To reset the printer, simply unplug and plug the cable. Once plugged in, the printer goes through a startup routine and resets itself.

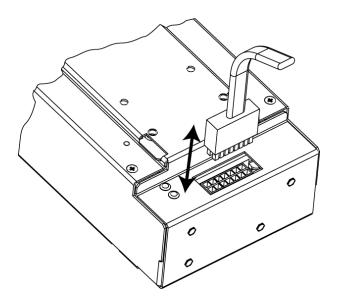




Figure 3: Printer Reset

### **Paper Feed Button**

Use the Paper Feed Button to advance the paper. The paper will automatically feed. Tear off the form that has been fed and the printer will be ready to print on a full form.

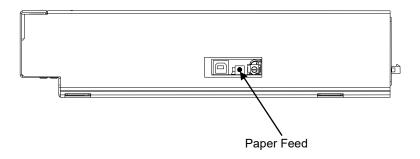


Figure 4: Paper Feed Button

### **Firmware Option Selector DIP switches**

Remove the Ticket tray to access the firmware option selector DIP switch. Functions vary in different firmware versions.

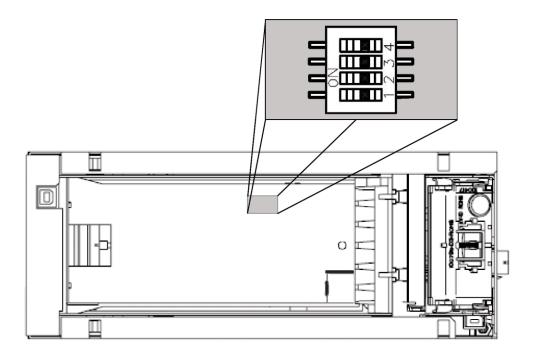






Figure 5: DIP Switch



#### **LED**

The LED on the main controller board shows the printer status. Please refer to section 1.6 for LED status and troubleshooting with LED. An external LED can be connected through the front 3-pin Molex connector. The pin-out is described in section 2.3.

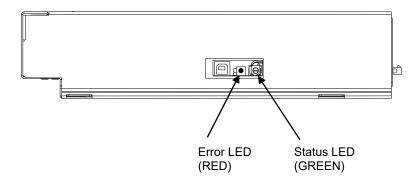


Figure 6: LED positions



### 1.5 Mounting

The Paycheck 4<sup>™</sup> must be mounted using the 4 threaded mounting fasteners or the 4 through-holes located under the printer (see Appendix A – Bottom View). Care must be taken so the fasteners do not damage the flex cable during installation or operation. The printer can be installed up to 90 degrees from horizontal (paper exit facing up), provided the proper paper tray is installed. For angles of 45-90 degrees, a specially designed paper tray must be used to avoid paper jams. The printer and thermal head warranty are unaffected under these conditions.



Figure 7: Horizontal and Vertical Mounting positions



## 1.6 Changing Paper

Change the paper when the paper is low or out.

**Caution:** Do not operate the printer or host computer if the printer runs out of paper. The printer will not operate without paper, but it may continue to accept data from the host computer. Because the printer cannot print any transactions, the data may be lost.

Load a stack of tickets into the printer. The maximum stack that will fit in the ticket cartridge is 200, 400 or 800 tickets depending on the cartridge option that was purchased with your printer.

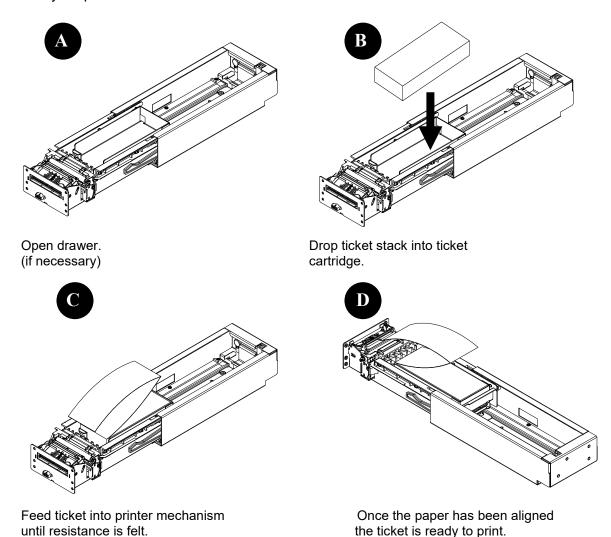


Figure 8: Loading Paper



### 1.7 Testing the Printer

Run this test to check the printer. The test prints and cuts a resident test ticket. Verify this ticket to judge the printing quality.

> Firmware: PAY-4.82H (0x1CB1) User Version: S R.2.4.0 Protocol: NTL COMMUNICATION Interface: Serial Baud Rate: 38400.8.NONE Handshaking: PRT+RTS NTL Print mode: Back USB: Fw Controlled PRINT CONTROL Speed: 100 mm/sec Black Bar Index: Right No HPQ Burn Time: 250 us Motor Current: Enabled Real-Time Command: Auto Reset Status: Disabled Smart TOF Validation Bit: Save Valid Bit: Enabled PRINTER ENVIRONMENT CONDITIONS 24.7 Volts Voltage: Temperature: 25 Celcius SYSTEM RESOURCES FLASH Used=00000 RAM: Used=00000 Free=65535 Free=65535

LIBRARY INVENTORY (CUSTOM) Templates: 6

Regions:

Model:

1.2.3.4.5.6.7.8.h.9.A.B.C.D. E,F,G,I,J,K,L,N,O,P,Q,R,S,T , U, Z, X, a, b, c, d, e, f, g, i, j, k, l, m, n

,o,p,q,s,t,u,v,w0,1,2,3,4,5,6,7,8,9,A,B

PAYCHECK 4

Fonts: Graphics:

MANUFACTURING INFORMATION

P312681 Printer ID: Date Code: 20100215

A to D: 03d8, 021a, 0231, 03c6 Dip Switch Config (1234): 0000 Status: \*S|0|PAY-4.82H|@|@|@|0||@|P|\*

Figure 9: Sample Test Ticket

To print the test ticket, power-on the printer while pressing and holding the Paper Feed Button for approximately 3 seconds. A test ticket similar to the one above will be printed approximately 5 seconds after. Press the paper feed button once more and the ticket will feed. Pressing the button again will result in blank tickets.



## 1.8 Troubleshooting the Printer

The printer is simple and generally trouble-free, but from time to time problems may occur. Follow these procedures to determine the cause and resolution of any problems the printer may be having. If the procedures in this section do not correct the problem, contact a service representative.

### Troubleshooting with LED

Error LED (Red)	Status LED (Green)	Condition
OFF	ON	Printer Ready
ON	OFF	Paper Out
MED BLINK	OFF	Temperature Error
SLOW BLINK	OFF	Voltage Error (Over 26.2 VDC)
FAST BLINK	ON	Print Head Error
FAST BLINK	ON	Missing Black Index Mark
FAST BLINK	ON	Paper Jam

**Table 2: Troubleshooting with LED** 

### **Printing Problems**

Problem	Possible Causes	What to Do
The receipt does not come out all the way.	Paper is jammed.	Open the tray and clear any jammed paper.
The printer starts to print, but stops while the the receipt is being printed.	Paper is jammed.	Open the tray and clear any jammed paper.
	Paper tickets loaded incorrectly.	Check that the paper is loaded properly.
The print is light or spotty.	Thermal printhead is dirty.	Use the recommended thermal receipt paper.
		Clean printhead at recommended intervals.
The vertical column of print is missing.	Change the paper stack to make sure the thermal coating is not the source. If it does not solve the problem, it could indicate a problem with the printer electronics.	Contact your authorized service representative.
One side or portion of the ticket has not been printed	Change the paper stack to make sure the thermal coating is not the source. If it does not solve the problem, it could indicate a problem with the printer electronics.	Contact service representative.

Table 3:

**Troubleshooting Printing Problems** 





### **Printer Does Not Work**

Problem	Possible Causes	What to Do
Printer Does Not Function When Turned	Printer not plugged in.	Check that printer cables is properly connected on both ends.  Check that the host or the power supply is getting power.
On.	Tray not fully closed.	Close the tray.
	The power supply voltage is higher than 26.8V.	Adjust the power supply output voltage to 24V +/- 5%.

**Table 4: Printer Does Not Work** 



## 2. Media and Supplies Guide

### 2.1 Media Specifications

The printer requires qualified thermal paper with the following specifications:

- Ticket dimensions shall be 65mm +/- 1mm (2.56 in +/- .040in) x 156mm +/-1 mm (6.14in +/- 0.040in)
- Paper stock shall be furnished in bulk stacks of 200, 400, 600 or 800 tickets.
- Tickets shall be attached (chained) to one another at 156mm intervals and supplied in "fan-folded" format
- The attachment between tickets shall be made with perforations across the paper width (65mm).
- The perforations shall also define the fold point in the paper stock.
- Perforation (burst) strength, or pull force, shall be 1.3lbs+/- 0.4 lbs (0.59Kg +/- 0.18 Kg)


## 2.2 Ordering Thermal Paper

We recommend the following paper grade produced by Appvion and Kanzaki Specialty Papers. There is a number of paper converters qualified to supply this paper, provided the stacks are from these recommended grades. We would be happy to provide a quote for qualifying additional grades not listed below.

Manufacturer	Numbers	Nanoptix part no.	Paper Grade
Appvion Papers	Tel:920-991-8438	100505-3024R (200 stack) 100505-3025R (400 stack) 100505-3026R (600 stack) 100505-3027R (800 stack)	Royale 800-4.5
Kanzaki Specialty Papers (USA)	Tel:888-526-9254 Fax: 413-731-8864	100505-3012R (200 stack) 100505-3013R (400 stack) 100505-3014R (600 stack) 100505-3015R (800 stack)	TO-381-N
Kanzan Spezialpapiere GmbH	Tel: +49 2421 5924-0 Fax: +49 2421 5924-19	N/A	KANZAN KL 69


**Table 5: Ordering Thermal Paper** 



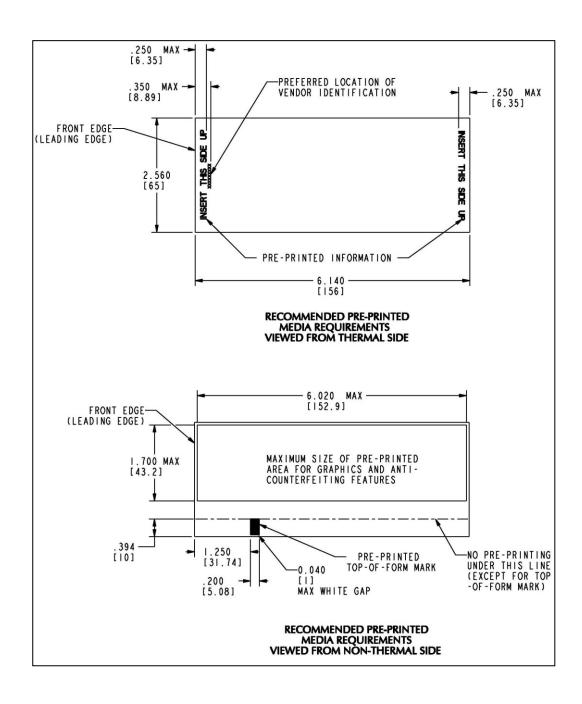

**Figure 10: Thermal Paper Specifications** 



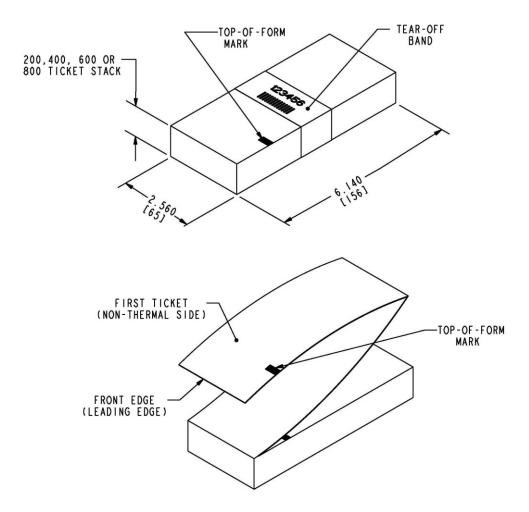

TICKET STACK AND BANDING EXAMPLE



**EXAMPLE OF BANDING INFORMATION** 

Figure 11: Ticket Stack and Banding Example





## 2.3 Ordering Miscellaneous Supplies

### **Power Supply and Power Cord**

Contact your sales representative to order the power supply listed in the table.

Part	Part Number
14-Pin Molex Power Supply (24VDC, 2.5A max., 60W)	210007-0202R
Power cord (North American)	102080-0000R
Power cord (Continental Europe)	102080-0001R
Power cord (Argentina / Australia)	102080-0003R

**Table 6: Part Numbers** 

### **Ordering Communication Cables**

Contact your sales representative to order the communication cables listed in the table. The numbers are for reference only. Suppliers may use other numbers.

Part	Part Number
RS232 communication cable (14-Pin Molex to DB-9)	210036-0004R
OneCheck In-Line Cable	210036-0003R
USB Cable 2M (A to B)	100390-0001R

**Table 7: Communication Cables Part Numbers** 





### **Ordering Bezels**

Contact your sales representative to order the bezels listed in the table.

Part	Part Number
Bezel Short Green	103663-0000R
Bezel Short Blue	103663-0001R
Bezel Short Red	103663-0008R
Bezel Long Green	103663-0002R
Bezel Long Blue	103663-0003R
Bezel Slanted Green	103663-0004R
Bezel Slanted Blue	103663-0005R
Bezel - External, Blue Illumination (Collect Ticket)	920000-0000R
Bezel - External, Green Illumination (Collect Ticket)	920000-0001R

Table 8: Bezel Types

### **Ordering Tray Sizes**

Part	Part Number
Paycheck 4 <sup>™</sup> - 400 Tray	950020-0001R
Paycheck 4 <sup>™</sup> - 600 Tray	950020-0002R
Paycheck 4 <sup>™</sup> - 800 Tray	950020-0003R

**Table 9: Tray Sizes** 





#### **Communication Cables Pin-Out**

The tables below detail the connection pin-out for the Universal Interface (14-pin Molex) on the printer side.

Pin	Signal Name	Printer I/O	Host I/O	Printer Function
1	Reset	Input	Output	Resets Printer
2	PRT_AUX_RXD	Input	Output	Auxiliary
		-	•	Receive
3	$V_{AUX}$	Input	Output	Auxiliary Power
4	PRT_AUX_TXD	Output	Input	Auxiliary
				Transmit
5	Signal/Frame Ground	Signal/Frame Ground	Signal/Frame Ground	Signal/Frame
				Ground
6	24V	Power Input	n/a	Power Input
7	Power Ground	Power Ground	n/a	Power Ground
8	24V	Power Input	n/a	Power Input
9	Bezel_pwm	24V Output	n/a	Bezel Driver
10	Power Ground	Power Ground	n/a	Power Ground
11	PRT_RS232_RXD	Input	Output	Data Receive
12	PRT_RS232_TXD	Output	Input	Data Transmit
13	PRT_Status	Output	Input	Pinter Ready
14	PRT_RS232_RTS	Output	Input	Handshake

Table 10: 14-Pin Universal Interface Pin-Out

The tables below detail the connection pin-out for the front Bezel Connector (3-pin Molex).

Pin	Signal	Printer I/O	
1	Bezel PWM	Output	
2	24VDC	Output	
3	GND	GND	

Table 11: Pin-out and signals of Front Molex (for Bezel)





# **APPENDIX A: Mechanical Drawings**

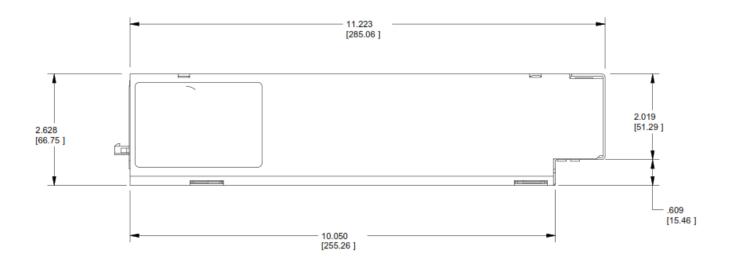


Figure 12: Mechanical Dimensions - Paycheck 4™ Printer Right Side View

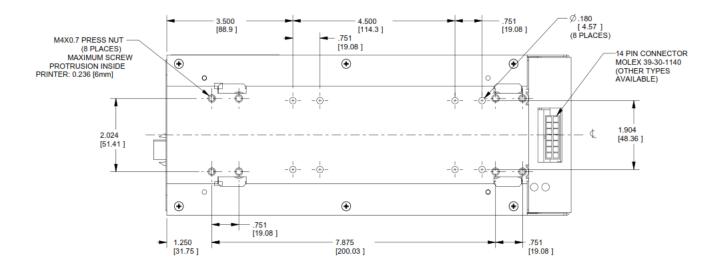


Figure 13: Mechanical Dimensions - Paycheck 4<sup>™</sup> Printer Bottom View



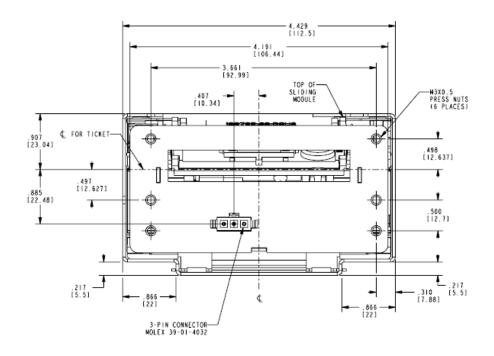


Figure 14: Mechanical Dimensions – Paycheck 4<sup>™</sup> Printer Front View

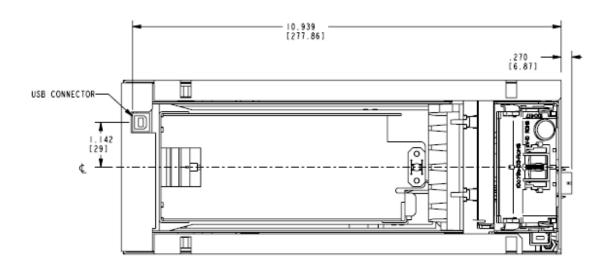


Figure 15: Mechanical Dimensions – Paycheck 4<sup>™</sup> Printer Top View



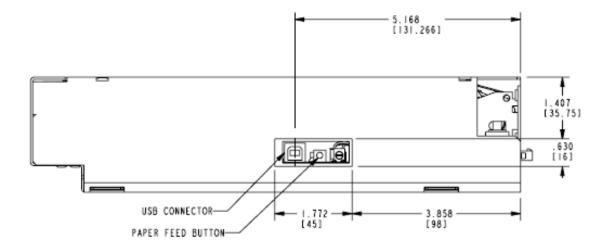


Figure 16: Mechanical Dimensions – Paycheck 4<sup>™</sup> Printer Left Side View



## **Nanoptix Contact Information**

Nanoptix Inc. 699 Champlain St. Dieppe NB, Canada E1A 1P6 Toll-Free (North America): 888-983-3030

Tel: +1 506-384-3388 Fax: +1 506-384-3588 E-mail: info@nanoptix.com Web site: www.nanoptix.com