



Quick Setup Guide

Wireless configuration

1. Configure the Host and Game Interface DIP switches to their starting positions

Host DIP switches

- Set switch 1 (Run Mode) to 0
- Set switch 2 (Wireless) to 0
- Switches 3 to 16 set to either 0 or 1

DIP Switch Configuration		
0	#	1
Run Mode	1	Recovery Mode
Wireless	2	Wired
Future	3	Future
Legacy Report	4	Enhanced Report
Print 1 Ticket	5	Print Carbon Copy
Stop on Printer Error	6	Ignore Printer Error
Cashout Limit Off	7	Cashout Limit On
Future	8	Future
	9	
	10	
Future	11	
	12	Future
	13	
	14	
	15	
	16	

Game Interface DIP switches

- Set switch 1 (Run Mode), 6 & 7 to 0
- Set switches 2 to 5 (yellow) for credit size
- Set switches 9 to 13 (Blue) for game number
- Switches 8 & 14 to 16 set to either 0 or 1

DIP Switch Configuration		
0	#	1
Run Mode	1	Recovery Mode
Credit Size In	2	Credit Size In
Credit Size In	3	Credit Size In
Credit Size Out	4	Credit Size Out
Credit Size Out	5	Credit Size Out
DIP Switch Sets	6	Software Sets
Credit Size		Credit Size
Wireless	7	Wired
Future	8	Future
	9	
Game Address	10	Game Address
Game Address	11	Game Address
Game Address	12	Game Address
Game Address	13	Game Address
Future	14	Future
Future	15	Future
Future	16	Future


2. Setup the management terminal. Place the Host and printer side by side

- Connect the RS232 cable from the printer (1A) to the Host(1B)
- Connect the power harness from the printer (2A) to the Host (2B)
- Connect the 24V power supply to port (3)

Printer Connections



Host Connections

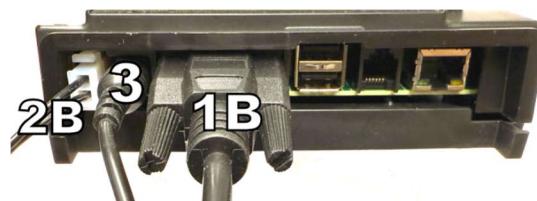

NANOPTiX

699 champlain street – dieppe – nb – e1a 1p6 - canada

+1-506-384-3388 – info@nanoptix.com

www.nanoptix.com

2026/1/7

3. Install Game Interface(s)

- Shut down all gaming terminal
- Mount the Game Interface inside the gaming terminal
- Using wire tap splice, connect the RJ45 to 5 wire cable to the Game
- Connect the Game Interface to the RJ45 to 5 wire cable using a RJ45 to RJ45 cable



BLACK	GREEN	YELLOW	BLUE	RED
Ground	Coin IN Meter	Cash OUT Meter	Knock off button	Power
				5 to 24 VDC

4. Host keypad button combinations

Power up ticket	Printed automatically with configuration information
Factory reset	Hold <# 2> then turn <KEY>
Set Time and Date	Hold <# 3> then turn <KEY> then <SELECT>
Print bookkeeping	Turn the <KEY>
Print Dailies	Press <DAILIES>
Reset Dailies	Hold <DAILIES> then <# 6> then <SELECT>
Set Dailies password	Hold <DAILIES> then turn <KEY> then <SELECT>
Clear Dailies password	Hold <#9> then turn <KEY> then enter <PASSWORD>
Print last cashout	Press <LAST CASHOUT>
Print last 10 cashouts	Press <LAST 10 CASHOUT>
Remote knock off	Enter game <#> Press <SELECT> then <KNOCK OFF>
Metrics information	Hold <DAILIES> then <# 8> then <SELECT>
wireless signal test	Hold <DAILIES> then <# 7> then <SELECT>
wireless signal report	Hold <DAILIES> then <# 9> then <SELECT>
Reset Network	Hold <# 4> then turn <KEY>
Wireless channel reset	Power OFF Host and games, Power ON the Host, then the games