

PayCheck® NextGen™ Rev 1 PayCheck® NextGen™ Rev 2

Service Manual



March 25, 2024 Document # 720009-0001R



Legal Notices

Disclaimer

Information in this document is subject to change without notice. Consult your Nanoptix Inc. sales representative for information that is applicable and current. Nanoptix Inc. reserves the right to improve products as new technology, components, software and firmware become available.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Nanoptix Inc.

Copyright

Copyright 2023 by Nanoptix Inc. Dieppe, New Brunswick Canada All rights reserved Printed in Canada Confidential, Unpublished Property of Nanoptix Inc.

Trademarks

Epson is a registered trademark of Epson Corporation.

Windows is a registered trademark of Microsoft Corporation.

Nanoptix is a trademark. Other trademarks and registered trademarks are the property of their respective holders.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Information to the User

This equipment must be installed and used in strict accordance with the manufacturer's instructions. However, there is no guarantee that interference to radio communications will not occur in a particular commercial installation. If this equipment does cause interference, which can be determined by turning the equipment off and on, the user is encouraged to contact Nanoptix Inc. immediately.

Nanoptix Inc. is not responsible for any radio or television interference caused by unauthorized modification of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Nanoptix Inc. The correction of interferences caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

In order to ensure compliance with the Product Safety, FCC and CE marking requirements, you must use the power supply, power cord, and interface cable, which were shipped with this product or which meet the following parameters:

Power Supply

UL Listed power supply with standard 60Hz-50Hz, 100-240VAC input and 24VDC output equipped with AC line filtering, over-current and short-circuit protection.

Use of this product with a power supply other than the Nanoptix Inc. power supply will require you to test the power supply and Nanoptix Inc. printer for FCC and CE mark certification.

Communication Interface Cable

An approved Nanoptix interface cable must be used with this product. Use of a cable other than Nanoptix approved product will require that you test the cable with the Nanoptix Inc. printer and your system for FCC and CE mark certification.

Power Cord

A UL listed, detachable power cord must be used. A power cord with Type SVT marking must be used. For applications outside North America, power cords that meet the particular country's certification and application requirements should be used.

Use of a power cord other than described here may result in a violation of safety certifications that is in force in the country of use.

Industry Canada (IC)

Radio Frequency Interference Statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.





Change and Review History

| Revision | Editor | Date | Changes |
|----------|--------------|------------|-------------------------------|
| 1 | G. Robichaud | 2017-10-18 | Initial version |
| 2 | Z. Wheeler | 2022-10-27 | Added duty cycle information |
| 3 | G. Robichaud | 2023-04-06 | Revised pictures of paper low |
| 4 | G. Robichaud | 2024-03-25 | Amended for Rev 2 changes |



Table of Contents

| About the Printer1 | | | | | |
|-----------------------|--|---------------------|--|--|--|
| 1.1 | Description of Printer | . 1 | | | |
| 1.2 | General specifications | . 2 | | | |
| 1.3 | Revision Identification | . 4 | | | |
| 1.4 | Duty Cycle limit | . 4 | | | |
| 1.5 | Paper Loading | . 5 | | | |
| 1.6 | Printer Interface | . 7 | | | |
| 1.7 1.7.1 1.7.2 | Printer Controls Printer Reset (Service use only) Paper Feed Button | . 9 . 9 | | | |
| 1.7.3 1.7.4 | DIP switches | | | | |
| 1.7.5 | Paper Low | | | | |
| 1.8.1 1.8.2 | Testing the Printer Configuration Ticket Printer Performance Metrics | 13 | | | |
| 1.9 | Clearing Jams | 15 | | | |
| 2 Troi | ableshooting the Printer | 16 | | | |
| 2.1 | Basic Printer Operation | 16 | | | |
| 2.2 2.2.1 2.2.2 | Communication Cables Pin-Out Universal Communication interface | 17 | | | |
| 2.3 2.3.1 | Printing Problems Main Controller PCB Connector Layout | | | | |
| 3 Med | ia and Supplies Guide2 | 20 | | | |
| 3.1 | Thermal Paper Specifications | 20 | | | |
| 3.2 | Ordering Thermal Paper | 22 | | | |
| 3.3 | Ordering supplies & cables | 22 | | | |
| 3.4 | Parts List (Available as a separate document) | 23 | | | |
| 3.5 | Exploded View (Available as a separate document) | 24 | | | |
| 3.6 | Mechanical Drawings | 25 | | | |
| 4 Spar | 4 Spare parts replacement instructions27 | | | | |
| 5 Prin | 5 Printer Maintenance Instructions | | | | |
| 6 Cam | ier maintenance instructions | 6 Service & Support | | | |
| o serv | | | | | |
| 6.1 | | 36 | | | |



Figures

| FIGURE 1: NANOPTIX PAYCHECK® NEXTGEN™ PRINTER | |
|---|-----|
| FIGURE 2: NAME PLATE | |
| FIGURE 2: DUTY CYCLE LIMIT | |
| FIGURE 3: TICKET STACK ORIENTATION | |
| FIGURE 4: LOADING PAPER | |
| FIGURE 5: INTERFACE - LEFT | |
| FIGURE 7: INTERFACE - RIGHT | . 8 |
| FIGURE 6: INTERFACE - FRONT | |
| FIGURE 7: PRINTER RESET | . 9 |
| FIGURE 8: PAPER FEED BUTTON | |
| FIGURE 9: DIP SWITCH | 10 |
| FIGURE 10: DIP SWITCH | 10 |
| FIGURE 11: LED Positions | |
| FIGURE 12: PAPER LOW | |
| FIGURE 13: SAMPLE TEST TICKET | 13 |
| FIGURE 14: SAMPLE METRICS TICKET | |
| FIGURE 15: CLEARING JAMS | 15 |
| FIGURE 16: SENSORS | |
| FIGURE 17: CONNECTOR LAYOUT (REV 2 SHOWN) | 19 |
| FIGURE 18: PERFORATION TEST | 20 |
| FIGURE 19: TICKET SPECIFICATIONS | 21 |
| FIGURE 20: PART LIST | 23 |
| FIGURE 21: EXPLODED VIEW | 24 |
| FIGURE 22: DIMENSIONS - FRONT | 25 |
| FIGURE 23: DIMENSIONS - BOTTOM | |
| FIGURE 24: DIMENSIONS - RIGHT SIDE (NO TICKET EXTENSION) | |
| FIGURE 25: DIMENSIONS - RIGHT SIDE (600 TICKET EXTENSION) | 26 |
| FIGURE 26: DIMENSIONS - RIGHT SIDE (800 TICKET EXTENSION) | 26 |
| FIGURE 27: PRINTER MOUNT | |
| FIGURE 28: JAM PROOF MODULE | 27 |
| FIGURE 29: BASE PLATE | 28 |
| FIGURE 30: CIRCUIT BOARDS | |
| FIGURE 31: TICKET INLET & INDEX SENSOR | 29 |
| FIGURE 32: TICKET TRAY | 29 |
| FIGURE 33: FRONT BAR | 30 |
| FIGURE 34: PRINTING MECH | 30 |
| FIGURE 35: PAPER GUIDE | 31 |
| FIGURE 36: TOP PAPER GUIDE | 31 |
| FIGURE 37: CHUTE SENSOR | 32 |
| FIGURE 38: GUIDE SWITCH | |
| FIGURE 39: REMOVE EXCESS DUST | |
| FIGURE 40: REMOVE TOP PAPER GUIDE | 33 |
| FIGURE 41: REMOVE ROLLER | 34 |
| FIGURE 42: CLEAN ROLLER | 34 |
| FIGURE 43: CLEAN PAPER GUIDE SENSOR USING A COTTON SWAB | 34 |
| FIGURE 44: CLEAN HEATING ELEMENTS | 35 |



Tables

| TABLE 1: SPECIFICATIONS | 3 |
|--|----|
| TABLE 2: REVISION | |
| TABLE 2: INTERFACE - LEFT | 7 |
| TABLE 4: INTERFACE - RIGHT | 8 |
| TABLE 3: INTERFACE - FRONT | 8 |
| TABLE 4: LED INFORMATION | 11 |
| TABLE 5: PAPER LOW | 12 |
| TABLE 6: BEZEL INTERFACE | |
| TABLE 7: 14 PIN RS232 SERIAL INTERFACE | 17 |
| TABLE 8: BEZEL INTERFACE | 17 |
| TABLE 9: TROUBLESHOOTING PRINTING PROBLEMS | 18 |
| TABLE 10: CONNECTOR FUNCTIONS | 19 |
| TABLE 11: PAPER SPECIFICATIONS | |
| TABLE 12: ORDERING THERMAL PAPER | |
| TARI E 13: ORDERING SUPPLIES | 22 |



About the Printer

1.1 Description of Printer

The Nanoptix PayCheck[®] NextGen[™] is extremely fast, quiet, and very reliable. With thermal printing technology, there is no ribbon cassette to change, and paper loading is extremely simple. The printer is small enough to fit almost anywhere and is easy to use with the ticket exiting from the front.



Figure 1: Nanoptix PayCheck[®] NextGen[™] Printer



1.2 General specifications

| Print Method | Direct Thermal | |
|---------------------------------|--|--|
| Resolution | 8 dot/mm (203 dpi) | |
| Print Width | 64mm | |
| Paper Width | 65mm | |
| Cartridge Size | 400, 600, 800 | |
| Operating Temperature | 0° to 50° C | |
| Storage Temperature | -20° C to 75° C | |
| Operating Relative Humidity | 5% to 90% RH at 50°C (non-condensing) | |
| Communication Interface Options | 2 Bidirectional RS-232C | |
| | Micro SD Card Reader | |
| | 2 USB 2.0 high-speed device ports | |
| | HDMI output port, 720p (Rev 1 only) | |
| | Ethernet Port (optional) | |
| | USB 2.0 high-speed host ports | |
| | (3 on Rev 1, 1 on Rev 2) | |
| Memory/Firmware | 32 Gbit Flash, 4 Gbit Ram & 16 kbit EEPROM | |
| Resident Character Sets | Support 32 fonts Approx. | |
| | (16 resident 16 user defined) | |
| Integrated Bar Codes | UPC-A, UPC-E, Interleaved 2 of 5, Code 39, Code | |
| | 93, Codabar, EAN 8, EAN 13, Code 128. | |
| | Note: other barcodes can be programmed quickly | |
| Speed | Up to 200 mm (7.9 in.) per sec. (monochrome) | |
| | Up to 125 mm (5 in.) per sec. (two-color mode) | |
| Sensors | Last sheet paper low, adjustable paper low, paper | |
| | out, ticket taken, drawer open, cover open, ticket | |
| | jam | |
| Duty Cycle (max.) | 5 tickets per minute | |
| Human Interface | Drop-in paper loading, status LEDs, paper feed | |
| B: . | button | |
| Dimensions | 113mm width x 67mm height x 285mm depth | |
| NA - 14 | without anti-jam: 255mm depth | |
| Weight | 0.665 Kg (1.465 lbs) | |
| | without anti-jam: 0.610 Kg (1.350 lbs) | |





| Immunity | EN 55024 |
|--------------------|--|
| - | Information Technology Equipment |
| Emission Standards | EN 55032:2015/A11:2020 |
| | CISPR 32:2015/AMD1:2019 |
| | AS/NZS CISPR 32: 2015 AMD 1:2020 |
| | EN 61000-3-2:2014 |
| | EN 61000-3-3:2013 |
| | FCC 47 CFR Part 15, Subpart B - Verification |
| | ICES-003 Issue 7 October 2020 |
| | EN 55035:2017/A11:2020 |
| | CISPR 35:2016 |
| | |
| Safety | QPS Certified |
| | Control Number: LR1123 |

Table 1: Specifications





1.3 Revision Identification

There are 2 versions of the Nanoptix PayCheck[®] NextGen[™] printer, PayCheck[®] NextGen[™] revision 1 and PayCheck[®] NextGen[™] revision 2. The revision is identified by the product serial number located on the name plate.



Figure 2: Name plate

| Product serial number | PayCheck [®] NextGen™ revision number |
|-----------------------|--|
| NGXXXXX | Revision 1 |
| NAXXXXX | Revision 2 |

Table 2: Revision

1.4 Duty Cycle limit

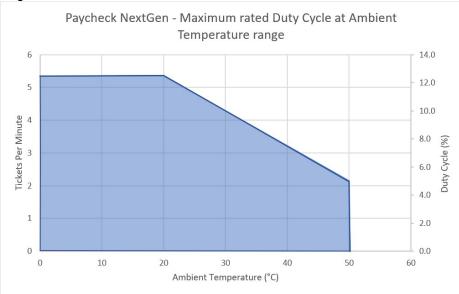


Figure 3: Duty Cycle Limit





1.5 Paper Loading

The paper stack should be changed when it is low or out.

Caution: The printer will not operate without paper, but it may continue to accept data from the host computer. Since the printer cannot print any transactions, the data may be lost.

The maximum stack that will fit in the ticket cartridge is 400, 600 or 800 tickets depending on the cartridge option that was purchased with the printer.



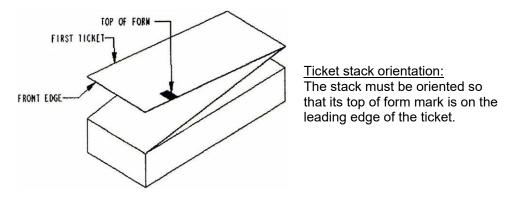


Figure 4: Ticket Stack Orientation




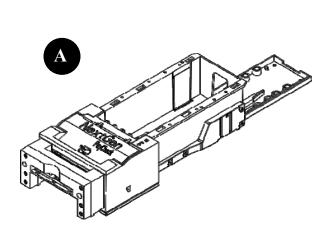

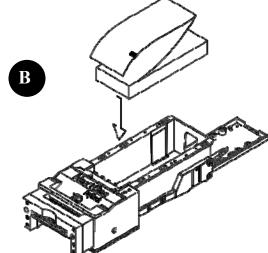


Open drawer. (if necessary)

Drop ticket stack into ticket cartridge.

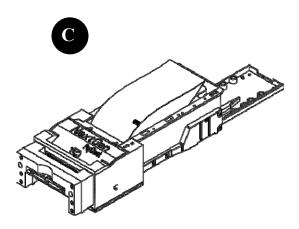

Feed ticket into printer mechanism until resistance is felt.

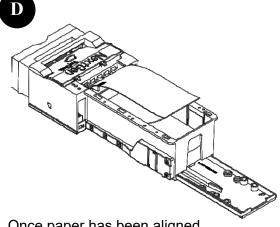

Once paper has been aligned ticket is ready to print.

Figure 5: Loading Paper





1.6 Printer Interface

| Identifier | Туре | Function |
|------------|-------------------------|---|
| Α | USB type B | USB communication |
| В | 14 pin "Molex mini fit" | Power & dual serial communication |
| С | Left jumper | Connects pin 5 to Pin 7 & 10 on port B (Rev 1 only) |
| C | Right jumper | Bezel control connected to pin 9 of port B (Rev 1 only) |
| n | Switch left position | Port B Aux port Netplex (Rev 1 only) |
| D | Switch right position | Port B Aux port RS232 (Rev 1 only) |
| E | 3 pin "JST PE" | Debug |

Note: For ESD protection, the left jumper must be installed when switch D is set to Netplex

Table 3: Interface - left

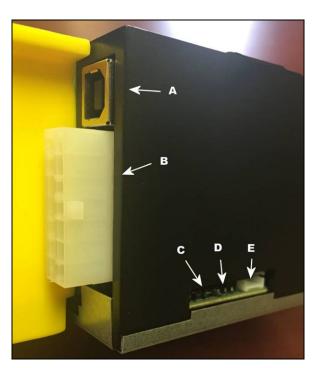


Figure 6: Interface - left





| Identifier | Туре | Function |
|------------|------------|------------------------------------|
| F | USB type A | USB communication (Rev 1 only) |
| G | RJ45 | 802.3 Network interface (optional) |
| Н | Micro HDMI | Video, etc. (Rev 1 only) |

Table 4: Interface - right



Figure 7: Interface - right

| Identifier | Туре | Function |
|------------|-------------------------|-------------------------------|
| I | SD media card interface | MicroSD |
| J | Molex microfit 3.0 | Bezel illumination |
| K | Mini USB type B | maintenance |
| L | USB type A | USB communication (expansion) |

Table 5: Interface - front

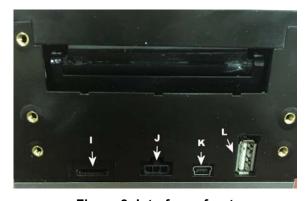


Figure 8: Interface - front



1.7 Printer Controls

1.7.1 Printer Reset (Service use only)

The printer is reset by disconnecting and reconnecting the power/communication cable. Once connected, the printer goes through a startup routine and resets itself.



Figure 9: Printer Reset

1.7.2 Paper Feed Button

The paper feed button is used to advance the paper. Once the ticket removed, the printer will realign the paper to the ready position.



Figure 10: Paper Feed Button



1.7.3 DIP switches

The DIP switch is available through the access hole of the bottom plate.

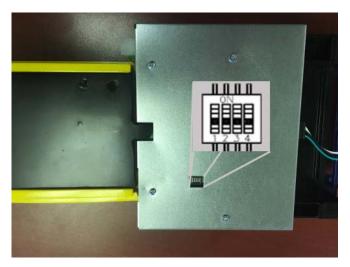


Figure 11: DIP Switch

| Identifier | Position | Function |
|------------|---------------------|-------------------|
| 4 | ON | Recovery mode |
| 1 | OFF (default) | Run mode |
| 2 | ON or OFF (default) | Spare |
| 3 | ON or OFF (default) | Spare |
| 4 | ON (default) | Watchdog enabled |
| 4 | OFF | Watchdog disabled |

Figure 12: DIP Switch



1.7.4 LED

Two LEDs provide visual feedback of the operation of the printer.



Figure 13: LED Positions

| Error LED (Red) | Status LED (Green) | Condition |
|--------------------|-----------------------|-------------------------------|
| OFF | ON | Printer Ready |
| ON | OFF | Paper Out |
| MED BLINK | OFF | Temperature Error |
| SLOW BLINK | OFF | Voltage Error (Over 26.2 VDC) |
| FAST BLINK | ON | Print Head Error |
| FAST BLINK | ON | Missing Black Index Mark |
| FAST BLINK | ON | Paper Jam |

Table 6: LED Information




1.7.5 Paper Low

There are 4 paper low detection options. Paper low sensor 1 is only used when paper low sensor 2 is in the off position.

| Detection quantity (sheets) | Paper low 2 position |
|-----------------------------|----------------------|
| 1 | OFF |
| 50 | HIGH |
| 35 | MEDIUM |
| 15 | LOW |

Table 7: Paper low

To change the paper low detection quantity. Turn the printer on its left side and remove the sensor cover. Using the alignment pins, place the sensor in the desired position. Then reinstall the sensor cover

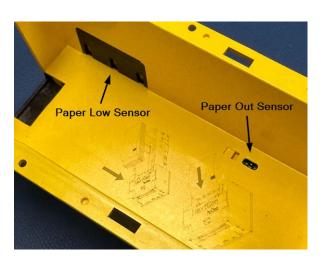

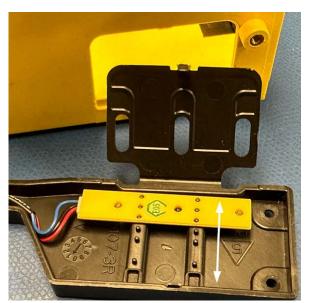


Figure 14: Paper low





1.8 Testing the Printer

1.8.1 Configuration Ticket

This test can be used to verify the correct operation of the printer. The test prints a resident ticket listing the current printer settings. This ticket can also be used to verify printing quality. To print the test ticket, the printer must be powered "ON" while holding the paper feed button for approximately 5 seconds. A status ticket similar to below will be printed. Pressing the button again will result in blank tickets.

PayCheck[®] NextGen™ Model: NPG-9.99Z (0x6D00) Firmware: Printer Driver Ver: 1.0.1.1 **SETTINGS** COMMUNICATION NTI Protocol: Serial Interface: 9600,8,NONE Serila Settings: Handshaking: XON + RTS Print mode: Page **NETWORKING** eth0 99.99.99.201 PRINT CONTROL Speed: 200 mm/sec BurnTime: 300 uS 58% Motor Current: PRINTER ENVIRONMENTAL CONDITIONS Voltage: 24.7 Volts 25 Celcius Temperature: SYSTEM RESOURCES FLASH Used=00000 Free=65535 LIBRARY INVENTORY (Satandard) Tpl: 0, 1, 2, 4, 4, 5,6,7,8,9,A,B Rgn 1, 2, 3, 4, 5, 6, 7, 8, h, 9, A, B, C, D, E, F, G, I, J, K, L, N, O, P, Q, R, S, T, U, Z, X, a, b, c, d, e, f, g, I, j, k, I, m, n, o, p, q Gfx: LIBRARY INFORMATION Board: 209022-0001R-04 Board ID: 5P00122 Printer ID: NG0003C Date Code: 20160505 *S|0|PAY-4.82H|@|@|@|I|@|P|*

Figure 15: Sample Test Ticket





1.8.2 Printer Performance Metrics

(not implemented in all firmware versions)

This ticket lists the performance metrics recorded by the printer since the printer was installed. The test prints a resident ticket listing various errors and status. To print this ticket, <u>the printer must be turned "ON" and operating in normal "Run Mode". Press and hold the paper feed button for approximately 5 seconds</u>. A performance ticket similar to below will be printed.

PayChreck™

(B8D52E31) Performance Report (B8D52E31)

Nanoptix PayCheck® USB printer Statistics

Printer ID: P4B3671

Model: PayCheck® NextGen™ Firmware: NG000512Q (0x9D8A)

Power Cycles: 2906 Tickets printed: Jams: 2 0 Voltage errors: TOF. Errors: 1 57 Drawer opened: Paper low: 46 Paper out: 23 Platen open: 19 Paper in chute: 2845 Max tickets (1 m): 5

Max tickets (10 m): 10
Max tickets (1 hr): 10
Max tickets (24 hr): 10
Max temp.: 28 Celcius

Min temp.: 17 Celcius Max voltage: 24.7 Volts

On time 0132D:08H:52M:43S

Figure 16: Sample Metrics Ticket



1.9 Clearing Jams

The Nanoptix PayCheck[®] NextGen[™] printer's paper guide and printing mechanism roller are easily removed, giving full access to the paper path.



Figure 17: Clearing Jams



2 Troubleshooting the Printer

2.1 Basic Printer Operation

Although the Nanoptix PayCheck[®] printer is a complex device, its operation is fairly simple. The printer requires two consumables to operate, (1) a regulated 24 VDC power source and approved thermal paper. The printer is equipped with eight communication interface ports.

The printer is mounted using a sliding baseplate. This baseplate's home position is detected by a magnetic sensor. A reflective optical sensor (B) situated in the bottom of the ticket tray is used to detect the last sheet of paper. In order to do this, the paper low sensor (C) must installed in "disable" position. This paper low sensor (C) has 3 other mounting positions used to trigger a paper low condition at varying amounts of paper left in the tray. A third optical sensor (F) is used in the printing mechanism assembly to detect the presence of paper and start the feeder motor when loading paper. This sensor also works in conjunction with a fourth optical sensor (A) situated in the paper chute to realign paper back to its "ready" position.

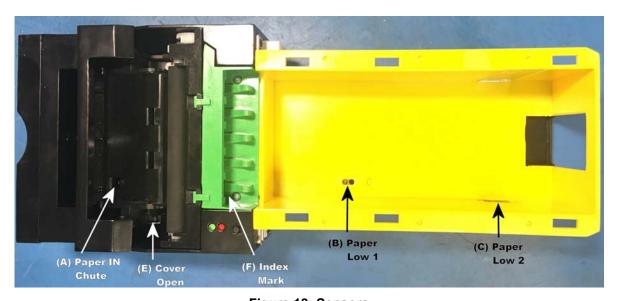


Figure 18: Sensors

| Identifier | Function |
|------------|--------------------------------|
| Α | Paper in chute |
| В | Paper low 1 (single sheet) |
| С | Paper low 2 (3 height options) |
| D | Printer closed (under bracket) |
| E | Cover open |
| F | Index (Top of form) |

Table 8: Bezel Interface





2.2 Communication Cables Pin-Out

2.2.1 Universal Communication interface

The table below describes the connection pin-out for the Universal Interface (14-pin "Molex" type)

| Pin | Signal Name | Printer I/O | Host I/O | Printer Function |
|-----|-------------------------|----------------|----------------|-----------------------|
| 1 | Reset | Input | Output | Resets Printer |
| 2 | PRT_AUX_RXD | Input | Output | Auxiliary Receive |
| 3 | VAUX | Input | Output | Auxiliary Power |
| 4 | PRT_AUX_TXD | Output | Input | Auxiliary Transmit |
| 5 | AUX_Ground (See note 1) | Signal / Frame | Signal / Frame | Signal / Frame Ground |
| | | Ground | Ground | |
| 6 | 24V | Power Input | n/a | Power Input |
| 7 | Signal / Frame Ground | Signal / Frame | Signal / Frame | Signal / Frame Ground |
| | | Ground | Ground | |
| 8 | 24V | Power Input | n/a | Power Input |
| 9 | Bezel_pwm (See note 2) | 24V Output | n/a | Bezel Driver |
| 10 | Signal / Frame Ground | Signal / Frame | Signal/ Frame | Signal/ Frame Ground |
| | | Ground | Ground | |
| 11 | PRT_RS232_RXD | Input | Output | Data Receive |
| 12 | PRT_RS232_TXD | Output | Input | Data Transmit |
| 13 | PRT_Status | Output | Input | Pinter Ready |
| 14 | PRT_RS232_RTS | Output | Input | Handshake |

Note 1: Pin 5 is isolated from pin 7 & 10 unless ground jumper is present

Note 2: Bezel illumination control jumper must be present for bezel modulation to be present on pin 9

Table 9: 14 Pin RS232 Serial Interface

2.2.2 Illuminated bezel interface

The table below describes the connection pin-out for the front Bezel Connector (3-pin "Molex" type).

| Pin | Signal | Printer I/O |
|-----|-----------|-------------|
| 1 | Bezel PWM | Output |
| 2 | 24VDC | Output |
| 3 | GND | GND |

Table 10: Bezel Interface





2.3 Printing Problems

The table below can be used to determine the cause and resolution of the most common problems that may occur. If the information in this section does not correct the problem, contact a Nanoptix service representative.

| Problem | Possible Causes | What to Do |
|----------------------------------|---------------------------------------|---|
| Printer Does Not | Printer not plugged in | Check that printer cables are properly |
| Function When Turned | | connected at both ends |
| On | | Check that the host and power supply |
| | | are getting power |
| | Tray not fully closed | Close the tray |
| | Flat cable incorrectly or not fully | Fully insert the flat cable in the into the |
| | inserted into the receptacle | receptacle at both ends |
| Paper jam | Paper width out of specification | Test paper width for compliance |
| | Debris or partial ticket stuck in the | Open paper guide and detach roller, |
| | paper path | remove debris |
| | Paper's perforation burst strength | Test paper perforation for compliance |
| | out of spec | |
| Noisy Feeder Motor (paper | The printer is meant to be | Do not operate printer without any paper |
| disengaged) | operated with paper engaged in | engaged in the printing mechanism |
| | the printing mechanism, failing to | Note: Never lubricate gears or any other |
| | do so will cause gears to grind | part of the printer |
| | and slip, noise may result | |
| Paper does not realign itself | Paper's alignment mark, (which is | The maximum reflectance of the |
| when a ticket is printed | the black dot printed on the non- | alignment mark is 15% (infrared). Simply |
| | sensitive side of thermal paper) | put, this means that the alignment mark's |
| | may be out of specification | color should be an even/crisp black. If |
| | | any white or gray is visible, it is an |
| | | indication that the reflectance could be |
| | | more than 15% |
| | | |
| Line of print or section missing | Paper's thermal coating | Change the paper stack to make sure the |
| lengthwise on the entire ticket | inconsistent | thermal coating is not the source |
| | Thermal printing mechanism | Contact a customer service |
| | damaged | representative |
| | The thermal print head is dirty | Clean the print head by following the |
| The print is light or enotty | | recommended procedure (Section 6) |
| The print is light or spotty | Paper's thermal coating | Change the paper stack to make sure the |
| | inconsistent | thermal coating is not the source |

Table 11: Troubleshooting Printing Problems





2.3.1 Main Controller PCB Connector Layout

| Α | TPH grounding tab |
|---|--------------------------------------|
| В | Feeder motor |
| С | Paper-in chute sensor & cover closed |
| D | Index (Top of Form) |
| E | Thermal Print Head |
| Н | Paper low – bottom (one sheet) |
| I | Paper low – side (3 options) |

Table 12: Connector Functions

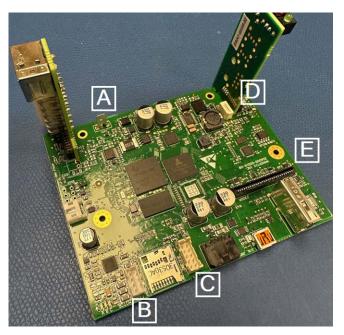




Figure 19: Connector Layout (Rev 2 shown)





3 Media and Supplies Guide

3.1 Thermal Paper Specifications

NOTE: Qualified thermal paper with the following specifications is required for proper operation.

| Width | 65 mm +/-1 (2.56 IN) |
|----------------------------|------------------------------------|
| Length | 156 mm +/- 1 (6.14 IN) |
| Thickness | 4.5 +0.1 -0.3 mil |
| Brightness | 89% |
| Smoothness | 2000 sec Avg. |
| Perforation burst strength | 1.3 +/- 0.4 LBS (0.59 +/- 0.18 Kg. |
| Alignment Mark (TOF) | Optical Density of 1.10 min. |

Table 13: Paper Specifications

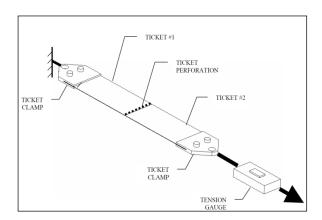


Figure 20: Perforation Test



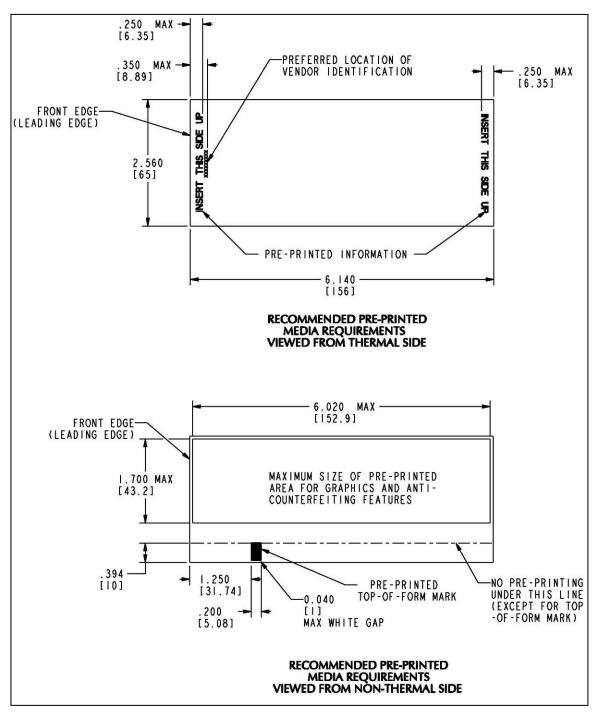


Figure 21: Ticket Specifications





3.2 Ordering Thermal Paper

The following paper grade produced by Appvion and Kanzaki Specialty Papers are recommended by Nanoptix. There are a number of paper converters qualified to supply this paper, provided they use the recommended grades listed in Table 14.

Paper qualification services are offered by Nanoptix for additional grades not listed below.

| Manufacturer | Numbers | Nanoptix part no. | Paper Grade |
|--------------------------------------|---|--|----------------|
| Appvion Papers | Tel:920-991-8438 | 100505-3024R (200 stack) 100505-3025R (400 stack) 100505-3026R (600 stack) 100505-3027R (800 stack) | Royale 800-4.5 |
| Kanzaki Specialty Papers (USA) | Tel:888-526-9254 Fax: 413-731-8864 | 100505-3012R (200 stack) 100505-3013R (400 stack) 100505-3014R (600 stack) 100505-3015R (800 stack) | TO-381-N |
| KANZAN Spezialpapiere GmbH | Tel: +49 2421 5924-0 Fax: +49 2421 5924-19 | N/A | Kanzan KL 69 |

Table 14: Ordering Thermal Paper

3.3 Ordering supplies & cables

Contact your sales representative to order the communication cables listed in the table. The numbers are for reference only. Suppliers may use other numbers.

| Part | Part Number |
|---|--------------|
| Power supply, 24 VDC | 213005-0032R |
| Power cord (North America) | 102080-0000R |
| Power cord (Europe) | 102080-0001R |
| RS232 communication cable (14-Pin "Molex" type to DB-9) | 210036-0004R |
| Second RS232 port, In-Line Cable | 210036-0003R |
| USB Cable 2M (A to B) | 100390-0001R |

Table 15: Ordering supplies





3.4 Parts List (Available as a separate document)

| ITEM# | PART NUMBER | DESCRIPTION | QTY |
|-------|--------------|--|----------------|
| 1 | 100041-0081R | SCREW, MACHINE, M2.5, 3MM | 2 |
| 2 | 100041-1164R | SCREW, SEMS, M3, 6MM | 10 |
| 3 | 100069-2007R | SPRING, BOTTOM PAPER PATH | 1 |
| 4 | 100420-0000R | SENSOR, PAPER IN-CHUTE | 1 |
| 5-1 | 208001-0011R | LED BOARD, BEZEL, GREEN | 1 |
| 5-2 | 208001-0011R | LED BOARD, BEZEL, BLUE | 1 1 |
| 5-3 | 208001-0012R | LED BOARD, BEZEL, RED | i |
| 6 | 208032-0003R | TOP-OF-FORM, FLEX CICRUIT | 1 |
| 7-1 | 208047-0005R | PCB, VERTICAL, PAPER FEED | 1 |
| | | | _ |
| 7-2 | 208047-0006R | PCB, VERTICAL, PAPER FEED, W/ ETHERNET | 1 1 |
| 8 | 208049-0002R | PCB, VERTICAL, POWER | 1 1 |
| 9 | 208051-0004R | SENSOR, PCB, PAPER-LOW | 1 1 |
| 10 | 208063-0001R | SENSOR, PCB, LAST SHEET | 1 |
| 11 | 209011-0105R | PCB, MAIN BOARD | 1 |
| 12 | 210032-0009R | HARNESS, LED BEZEL BOARD | 1 |
| 13 | 210087-0003R | HARNESS, SIDE PAPER-LOW SENSOR | 1 |
| 14 | 210087-0005R | HARNESS, LAST SHEET SENSOR | 1 |
| 15 | 210088-0001R | HARNESS, CHUTE SWITCH ASSEMBLY | 1 |
| 16 | 300235-0001R | SPRING, LOCKING | 1 |
| 17 | 300250-0006R | COVER PLATE, MAIN PCB | 1 |
| 18 | 310019-0001R | PAPER GUIDE, BOTTOM | 1 |
| 19 | 310023-0001R | HOLDER, SPRING, BOTTOM PAPER PATH | 1 |
| 20 | 310027-0001R | HOLDER, COVER SWITCH | 1 |
| 21 | 310088-0007R | FRAME, NEXTGEN | 1 |
| 22 | 310089-0005R | MECH MOUNT BRACKET | 1 |
| 23 | 310091-0006R | BASE PLATE | 1 |
| 24 | 310092-0003R | PAPER TRAY | 1 |
| 25 | 310094-0003R | LATCH, BASE PLATE RELEASE | 1 |
| 26-1 | 310100-0002R | EXTENSION, PAPER TRAY, 800 | 1 |
| 26-2 | 310100-0003R | EXTENSION, PAPER TRAY, 600 | 1 |
| 27 | 310101-0001R | COVER, TRAY | 1 |
| 28 | 310102-0004R | HANDLE | 1 |
| 29 | 310105-0001R | ANTI-JAM MODULE, FACE | 1 1 |
| 30 | 310108-0001R | HOLDER, TOP-OF-FORM SENSOR | i |
| | | | 1 |
| 31 | 310107-0003R | COVER, PAPER-LOW SENSOR | _ |
| 32 | 310109-0001R | ANTI-JAM MODULE, BASE | 1 1 |
| 33 | 310110-0001R | TOP CHUTE COVER, ASSEMBLY | 1 |
| 34 | 310118-0001R | HOLDER, BOTTOM PAPER CHUTE | 1 |
| 35 | 310139-0001R | COVER, LAST SHEET SENSOR | 1 1 |
| 36-1 | 310172-0001R | BEZEL, SHORT, BLUE | 1 |
| 36-2 | 310172-0002R | BEZEL, SHORT, GREEN | 1 |
| 36-3 | 310172-0003R | BEZEL, SHORT, RED | 1 |
| 36-4 | 310172-0004R | BEZEL, SHORT, CLEAR | 1 |
| 36-5 | 310173-0001R | BEZEL, LONG, BLUE | 1 |
| 36-6 | 310173-0002R | BEZEL, LONG, GREEN | 1 |
| 36-7 | 310173-0003R | BEZEL, LONG, RED | 1 |
| 36-8 | 310173-0004R | BEZEL, LONG, CLEAR | 1 |
| 37 | 310186-0001R | BLANKING PLATE | 1 |
| 38 | 332400-0001R | MAGNET, BASE PLATE | 1 |
| 39 | 340300-0306R | SCREW, THREADING, M3, 6MM | 2 |
| 40 | 340300-0308R | SCREW, THREADING, M3, 8MM | 2 |
| 41 | 340302-2208R | SCREW, THREADING, M2.2, 8MM | 5 |
| 42 | 340302-2505R | SCREW, THREADING, M2.5, 5MM | 1 |
| 43 | 340302-2508R | SCREW, THREADING, M2.5, 8MM | 6 |
| | | | |
| 44 | 340400-0001R | RETAINER RING | 1 1 |

Figure 22: Part List



3.5 Exploded View (Available as a separate document)

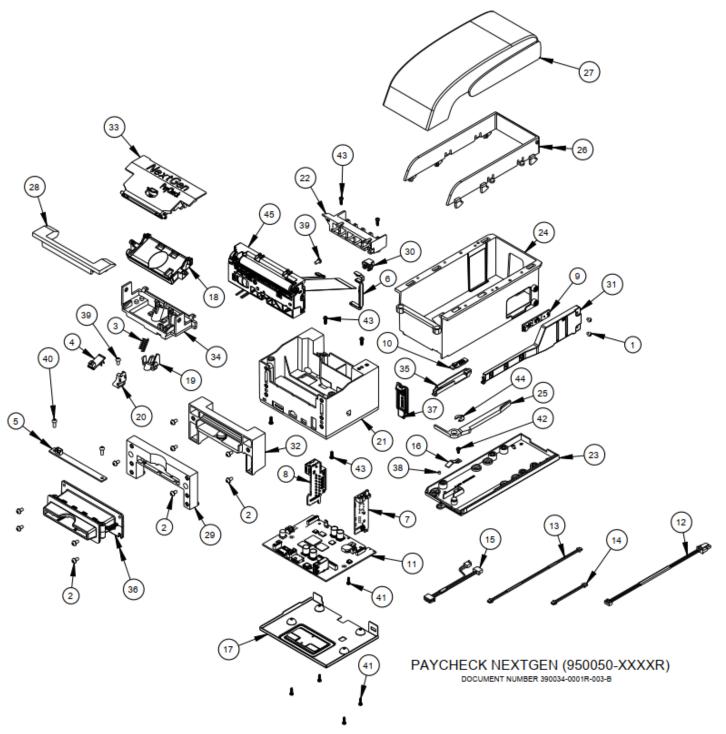


Figure 23: Exploded View



3.6 Mechanical Drawings

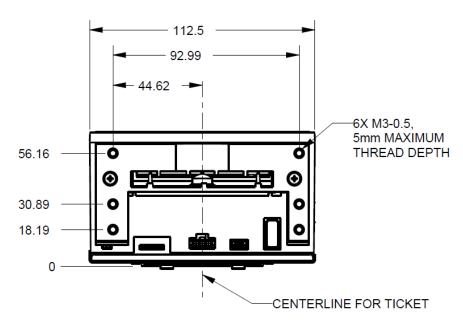


Figure 24: Dimensions - Front

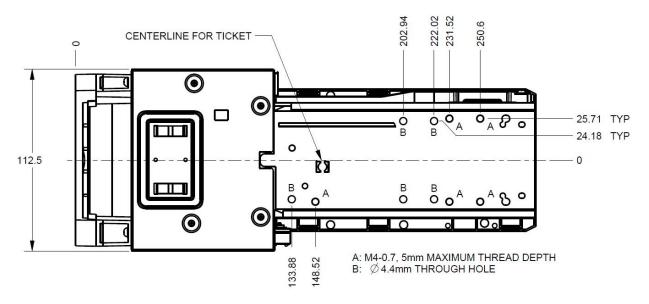


Figure 25: Dimensions - Bottom



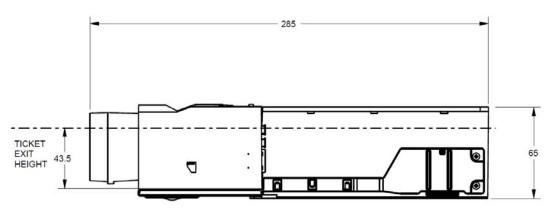


Figure 26: Dimensions – Right side (no ticket extension)

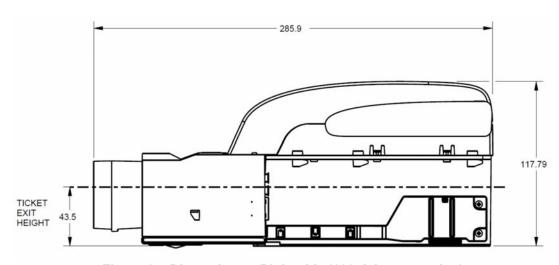


Figure 27: Dimensions – Right side (600 ticket extension)

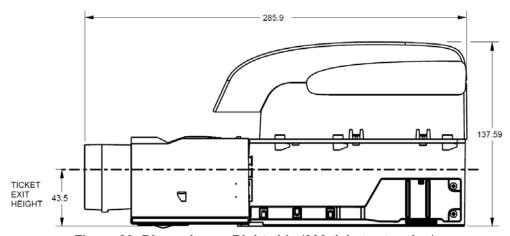


Figure 28: Dimensions – Right side (800 ticket extension)



4 Spare parts replacement instructions



Use ESD protection (such as a wrist strap) anytime a PCB is exposed



Instruction A: Removal of the printer from the mounting bracket

- 1. Pull printer forward until resistance is felt, then move green lever all the way to the left
- 2. Pull printer further forward to separate from mounting bracket



Figure 29: printer mount

Instruction B: Removal of jam proof module

- 1. Remove 2 screws to remove the outer jam proof module
- 2. Remove 6 screws to remove the inner jam proof module





Figure 30: Jam Proof module



Instruction C: Removal of the base plate

1. Remove 4 screws then lift up to remove the baseplate

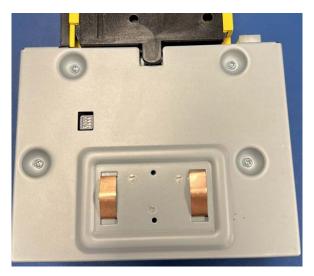


Figure 31: Base Plate

Instruction D: Removal of the circuit boards

- 1. Disconnect the 2 paper low harnesses
- 2. Lift board and disconnect the remaining harnesses
- 3. The 2 auxiliary boards are removed by lifting up

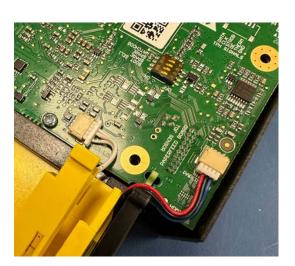




Figure 32: Circuit boards



Instruction E: Removal of ticket inlet & Index mark (TOF) sensor

- 1. Remove 2 mounting screws and lift ticket inlet
- 2. Remove the sensor by pushing out the sensor holder



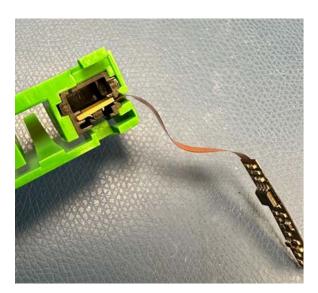


Figure 33: Ticket Inlet & Index sensor

Instruction F: Removal of ticket tray

1. Remove 2 mounting screws and lift ticket tray



Figure 34: Ticket Tray



Instruction G: Removal of front bar

1. Remove 2 mounting screws and lift bar

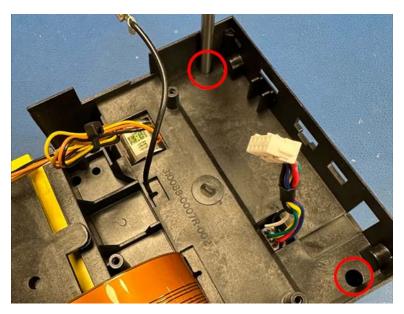


Figure 35: Front bar

Instruction H: Removal of printing mechanism assembly

1. Lift assembly up while guiding harnesses through their corresponding access holes



Figure 36: Printing Mech





Instruction I: Removal of the paper guide assembly

1. Remove the mounting screw then slide the guide assembly up and away from the printing mechanism



Figure 37: Paper guide

Instruction J: Removal of the top paper guide from the assembly

1. Push out on both lower paper guide tabs at the same time while sliding the top paper guide forward.

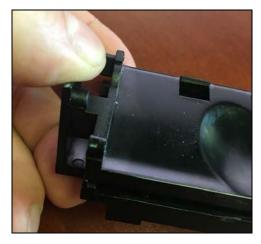


Figure 38: Top paper guide





Instruction K: Removal of chute sensor

1. Push front sensor mounting clip then lift sensor up.



Figure 39: Chute sensor

Instruction L: Removal of the paper guide switch assembly

1. Remove mounting screw and lift up the assembly up



Figure 40: Guide switch



5 Printer Maintenance Instructions

<u>Note:</u> Under normal operating conditions, the minimum interval for cleaning the Nanoptix PayCheck[®] NextGenTM printer is 3 months or 5 km of paper printed, whichever comes first.

1. Remove excess dust using a portable vacuum cleaner or wipe clean with a damp cloth

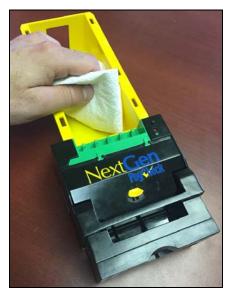


Figure 41: Remove excess dust

2. Remove top paper guide by pressing on the yellow clip and lifting up. Then pull forward to unhinge.



Figure 42: Remove top paper guide



3. Remove roller by pressing down and rolling towards the front of the printer



Figure 43: Remove Roller

4. Clean the roller with a cotton swab and a mild soap solution.



Figure 44: Clean Roller

5. Clean paper guide sensor using a cotton swab



Figure 45: Clean paper guide sensor using a cotton swab



6. Clean the heating elements (black line on the print head) with a cotton swab and isopropyl alcohol.

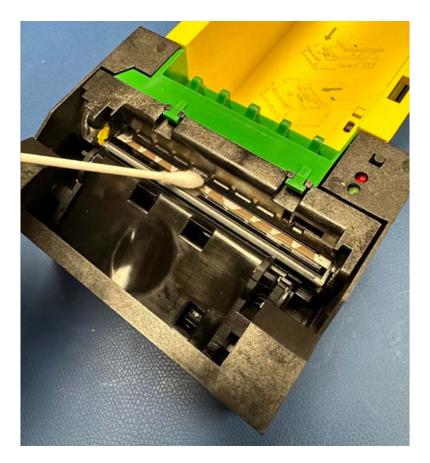


Figure 46: Clean heating elements



6 Service & Support

6.1 Returning printers back to Nanoptix for repairs (RMA)

- Send repair approval request to Nanoptix Inc. which should include:
 - Printer model #
 - Serial #
 - Brief problem description
- Ship defective products to Nanoptix Inc.
- Ensure that each package being sent is identified by the specified RMA number

<u>NOTE:</u> Make sure to place a blank ticket or a piece of paper between the thermal print head and roller for shipping and storage.

RMA # XXXXXX Nanoptix Inc. 699 Champlain St. Dieppe, NB, Canada E1A 1P6

NOTE: It is imperative to have every package clearly identified by an RMA number.

6.2 Technical Support Contact Information

Service department Nanoptix Inc. 699 Champlain St. Dieppe, NB, Canada E1A 1P6

Tel: +1.506.384.3388 Fax: +1.506.384.3588

E-mail: service@nanoptix.com Web site: www.nanoptix.com